

- 1) Connect a computer to the ProtoCessor using the FieldServer Toolbox application. For instructions on connecting a computer to the ProtoCessor, see the document: “*Connecting a computer to a Mestek Communications Bridge*”. You should see the FieldServer Toolbox Main screen as shown in Figure 1. The device name may be different depending on which Mestek product you are dealing with.

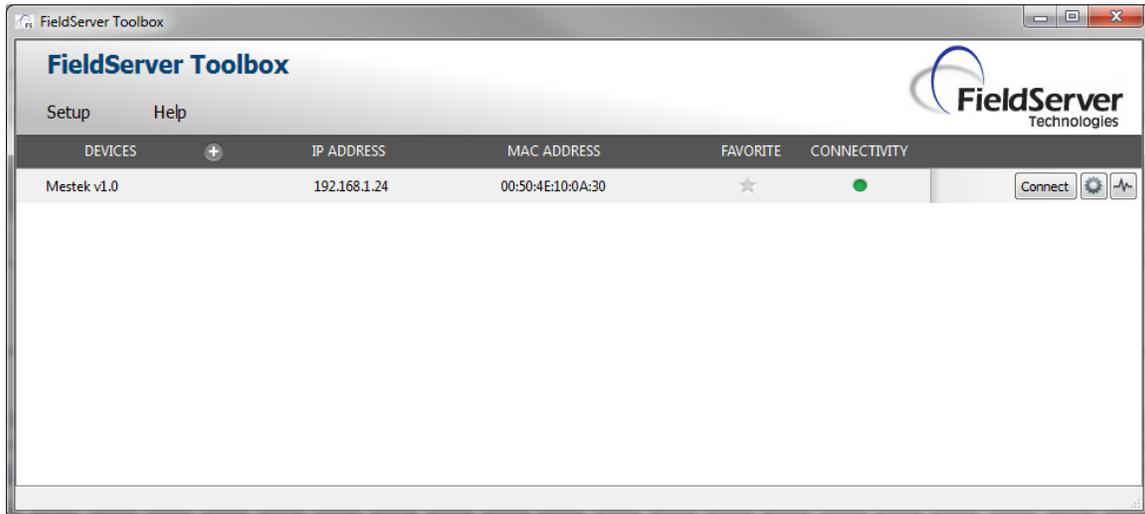


Figure 1. FieldServer Toolbox

- 2) Click the “*Configure*” button  to open the “*Device Network Settings*” screen shown in Figure 2.

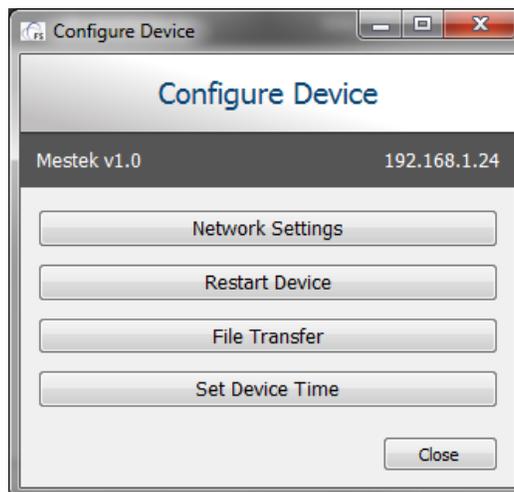


Figure 2. FieldServer Toolbox – Configure Device

- 3) Click the “*File Transfer*” button to open the “*File Transfer*” screen shown in Figure 3.

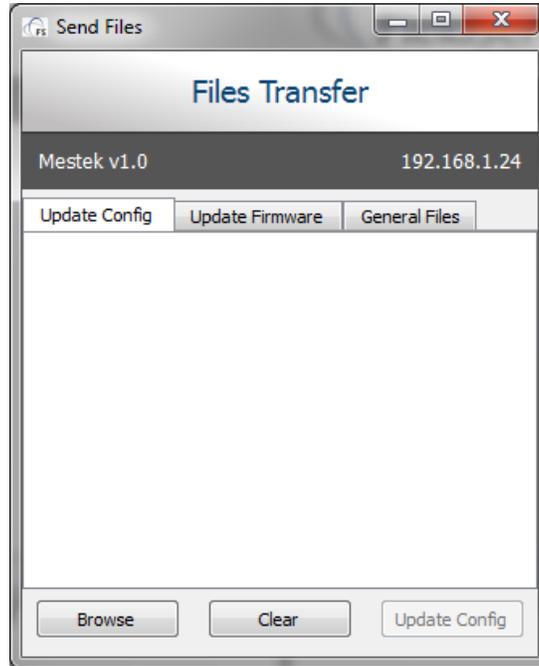


Figure 3. FieldServer Toolbox – File Transfer

- 4) Click the “*Browse*” button to open the “*File Select*” screen shown in Figure 24. In order to show all configuration files, click the file extension box in the lower right corner and select “*All Configs (*.csv)*”. Select the configuration file to be used and click “*Open*”.

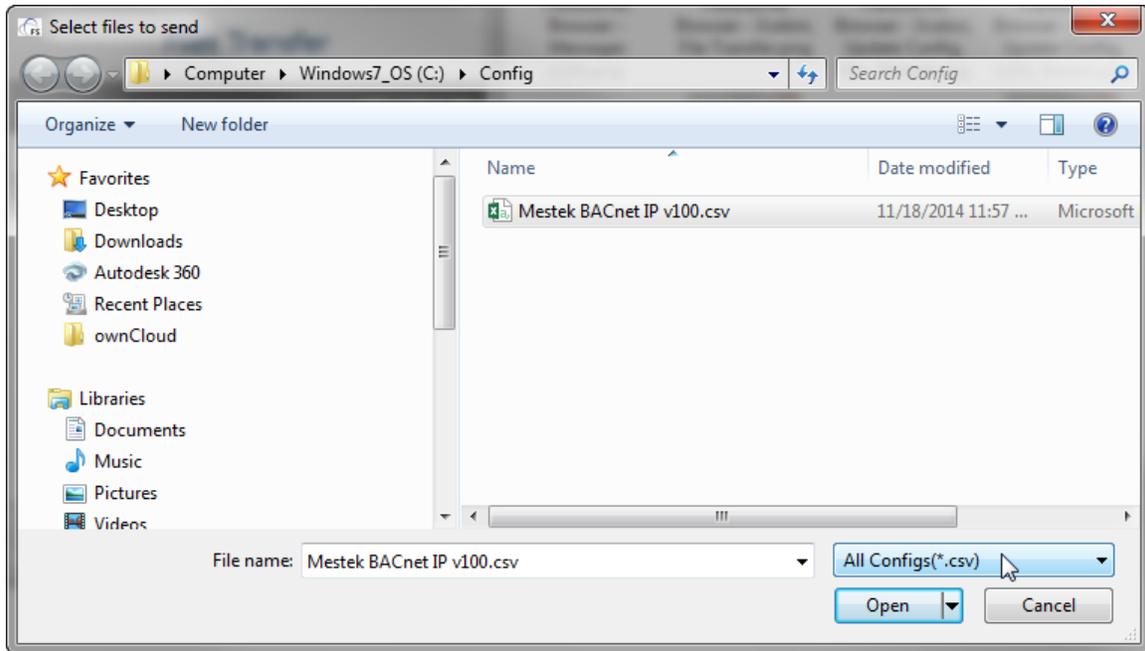


Figure 4. FieldServer Toolbox – Select Files

- 5) The “*File Transfer*” screen will be displayed again, now showing the selected file. Click the “*Update Config*” button to send the configuration file to the ProtoCessor.

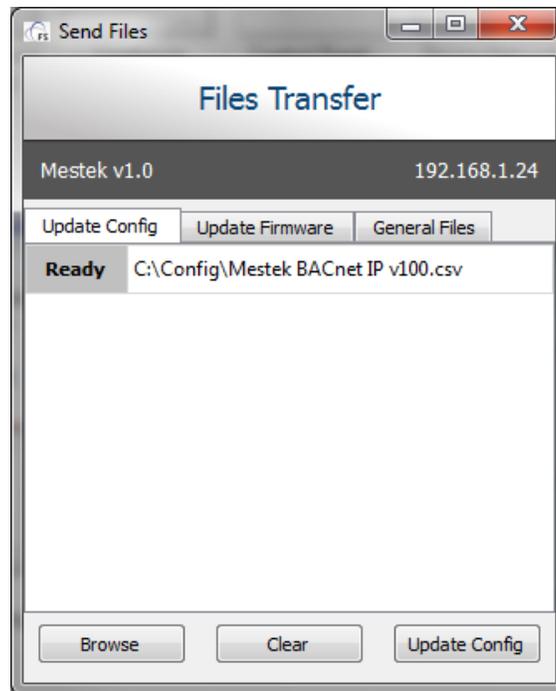


Figure 5. FieldServer Toolbox – File Transfer

- 6) A confirmation message box will be displayed as shown in Figure 6. Clicking “Restart” will restart the ProtoCessor, and the FieldServer Toolbox main screen will be displayed. After the ProtoCessor restarts (approximately 60 – 90 seconds), the ProtoCessor should be discovered as shown in Figure 7.

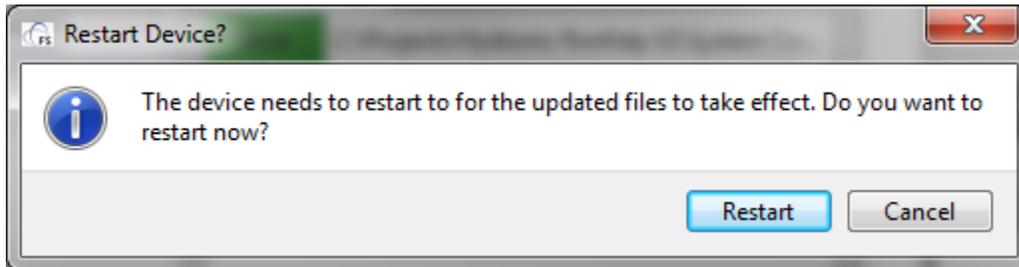


Figure 6. FieldServer Toolbox – Confirmation

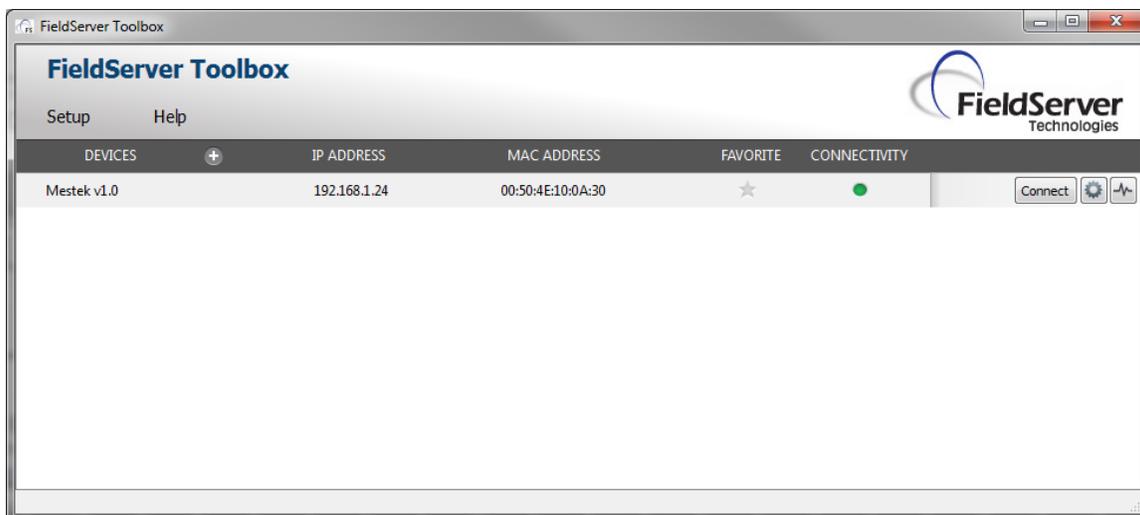


Figure7. FieldServer Toolbox