


INSTALLATION INSTRUCTION

Y-SPLITTER NOZZLE KIT

FOR USE WITH 100,000-400,000 BTU/HR
TUBULAR PROPELLER & BLOWER UNIT HEATERS

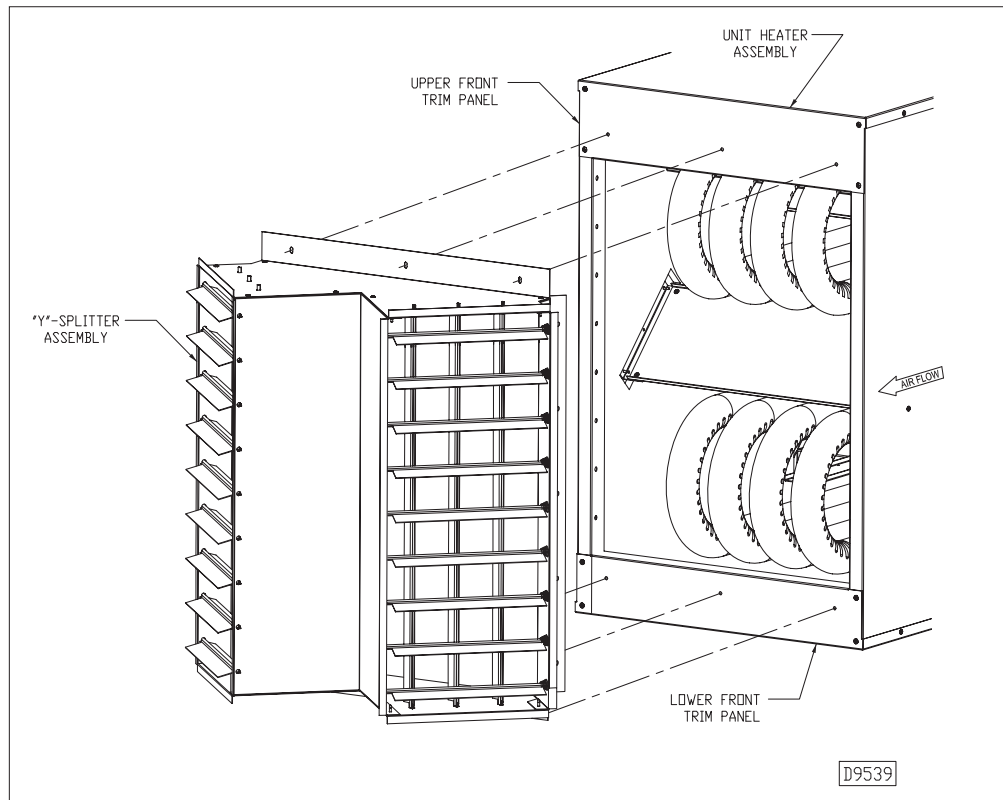

Recommended procedure for Y-splitter nozzle installation onto the unit heater:

1. Remove the louvers and cone springs from the discharge opening of the unit heater. These unit heater louvers and springs can be discarded.
2. Install the nozzle by securing the top panel of the nozzle to the face of the upper front trim panel of the unit heater, using the screws provided; drill through into the unit heater trim panel.
3. Secure the bottom of the nozzle to the lower front trim panel of the unit heater by drilling through and using the screws provided.
4. Secure the sides of the nozzle to the sides of the unit heater by using (5) of the provided screws per side to drill through into the unit heater side panels.
5. Install the provided vertical and horizontal Y-splitter louvers and cone springs; adjust louvers as needed.

KIT CONTENTS:

Size (MBH):	100-150	175-250	300-400
Screws	15	15	18
Vertical Louvers	6	8	16
Horizontal Louvers	18	18	18
Louver Springs	24	26	34



260 NORTH ELM ST., WESTFIELD, MA 01085

TEL: (413) 568-9571 FAX: (413) 562-8437

www.mestek.com