
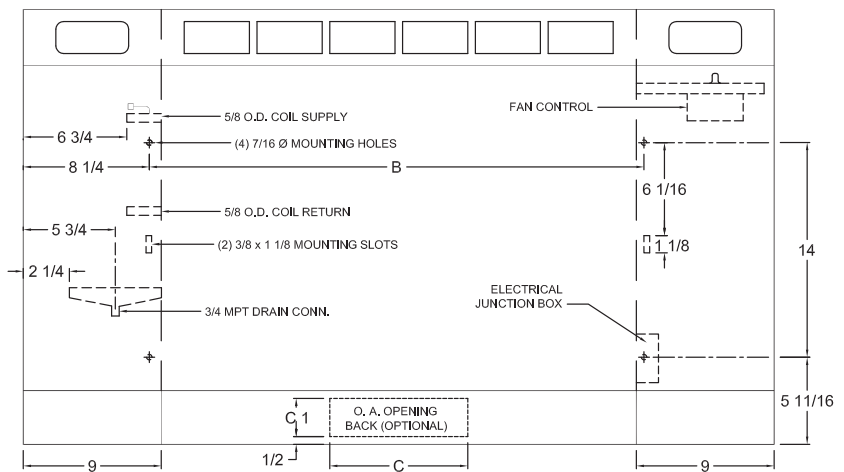
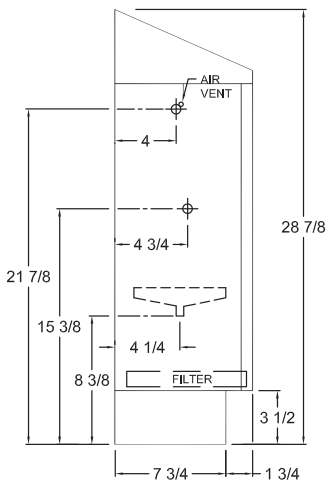



UNITAIRE IV FAN COIL UNITS SETf

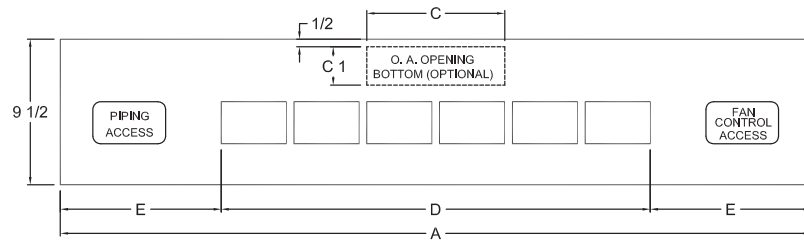


LEFT HAND PIPING CONNECTIONS SHOWN. RIGHT HAND OPPOSITE. PIPING HAND DETERMINED WHEN FACING AIR OUTLET
ELECTRIC JUNCTION BOX LOCATION MAY VARY DEPENDING UPON CONTROL REQUIREMENTS. CONTACT FACTORY.

DIMENSIONS								
UNIT SIZE	A	B	25% O.A. INTAKE		100% O.A. INTAKE		D	E
			C	C1	C	C1		
02	39	22	9	2-1/2	21	3	19-3/4	9-5/8
03	45	28	9	2-1/2	27	3	23-3/4	10-5/8
04	49	32	15	2-1/2	31	3	27-3/4	10-5/8
06	63	46	15	2-1/2	45	3	43-3/4	9-5/8
08	75	58	27	2-1/2	N/A	N/A	55-3/4	9-5/8
01/12	95	78	27	2-1/2	N/A	N/A	75-3/4	9-5/8

OPTIONAL 1-ROW AUXILIARY HEATING COIL

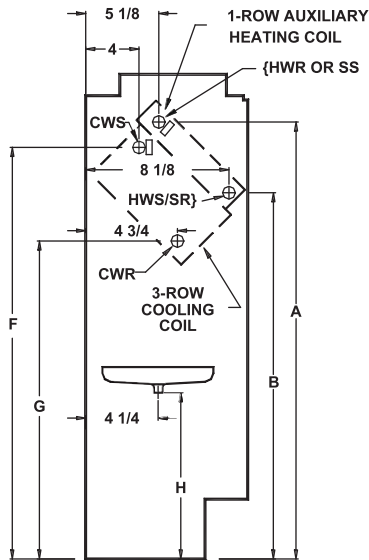

Left Hand View

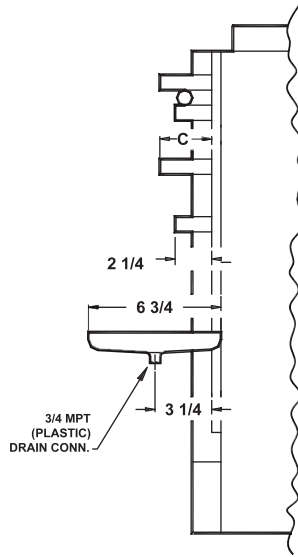

Front View

LEGEND

CWS-CWR: Chilled Water Supply – Return
 HWS-HWR: Hot Water Supply - Return
 SS-SR: Steam Supply – Return

SPECIAL NOTES

1-Row Auxiliary Steam or Water Coil Connections may be “Same As” or “Opposite” Cooling Coil Piping. If “Opposite” is selected, the fan speed control must be located on the chilled water side or located remote from the unit.

CONTROL PACKAGES

Control Packages require Engineering Investigation for confirmation of adequate space allowance.

DIMENSIONS (In.)			
UNIT SIZE	F	G	H
02			
03	23	17-13/16	2
04			
06			
08	22-7/8	17-15/16	3
01			
12			

Coil connections are 5/8" O.D. sweat

