
Pneumatic Sensotherm

Combination Fire/Smoke Damper

Application

The Pneumatic Sensotherm (PSOT) is a packaged combination of two heat sensing, bi-metallic disc type switches of different temperature ratings, and electro-pneumatic relief valve (EP Valve), and a blade position indicator. Upon exposure to elevated temperature, the lower temperature rated thermal disc mechanically opens the electric circuit and interrupts the power supply to the EP Valve, thus causing the actuator's air supply to exhaust to atmosphere. As the actuator's air supply is depleted, its internal spring return drives the damper to the closed and locked position. The blade position indicator will provide feedback to an installer-supplied controls system that the damper is closed. When necessary, an installer-supplied three position Master Control Switch (MCS) can be used to redirect power from the open lower temperature rated thermal disc to the closed higher temperature rated thermal disc. This returns power to the EP Valve and re-supplies air pressure to the actuator, thus opening the damper to purge smoke or pressurize zones surrounding the fire incident area. If the temperature conditions again raise to elevated levels, the higher temperature rated thermal disc will open, the EP Valve will once again exhaust to atmosphere, and the damper will re-close to maintain the integrity of the fire barrier.

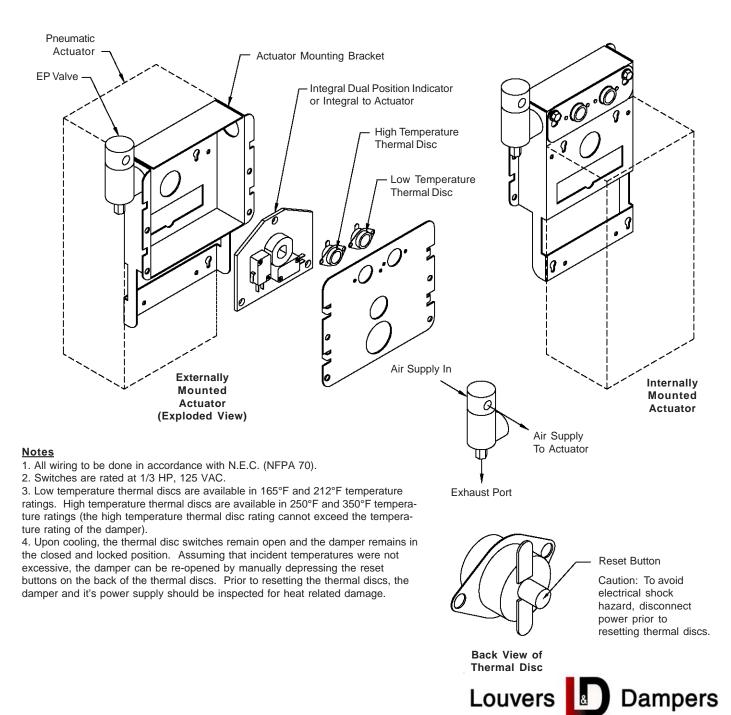



SD-PSOT-13.02

PSOT

Pneumatic Sensotherm

Combination Fire/Smoke Damper

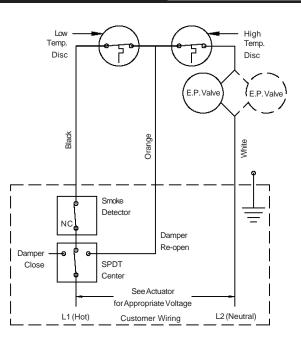

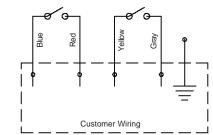

Integral Dual Position Indication (IDPI) Wiring Chart			
actuator mounting location	damper full open	damper full close	damper mid-stroke
	closed circuit		
external left	red / blue	yellow / gray	none
external right	yellow / gray	red / blue	none
internal left	yellow / gray	red / blue	none
internal right	red / blue	yellow / gray	none

* This wiring is opposite if the actuator is rotated 90° so that it is parallel to the duct.

ESOT/PSOT Wiring, Test, and Operating Instructions

Damper is supplied with one low temperature thermal disc and one high temperature thermal disc. All dampers require a master control switch (supplied by others) for re-openable operation.

CUSTOMER WIRING

1. Connect input power lead L1 from the normal closed position lead of the (MCS) switch to damper lead L1.

Note: If a smoke detector or other sensing device is to be employed, its NC contact set should be wired in series between the (MCS) position switch normal wire and lead L1.

- 2. Connect incoming lead L2 to damper lead L2.
- 3. Connect the reopen switch lead from (MCS) to orange damper lead.
- 4. Connect the incoming ground lead to the wiring enclosure.
- 5. Install IDPI (if used) per the schematic.
- 6. Replace enclosure cover.

CIRCUIT TEST

- 1. Place (MCS) switch in damper close position.
- 2. Apply power.
 - Result: The closed indicator light (if used) should be on and the damper blades closed.
- 3. Transfer (MCS) switch to reopen position.

Result: The damper blades should open; the closed indicator light (if used) should go off and the open indicator light (if used) should go on.

- 4. Transfer (MCS) switch to the normal position.
 - Result: The damper blades should remain open and the open indicator light (if used) should remain on.
- 5. Transfer the (MCS) switch to the closed position.

Result: The damper blades should close; the open indicator light (if used) should go off and the closed indicator light (if used) should go on.

EMERGENCY OPERATION (SMOKE MANAGEMENT)

1. MCS closed position: Damper will close regardless of whether the thermal switch device has activated or not and regardless of the command from the smoke system.

2. **MCS re-open position:** If the damper has not been exposed to an elevated temperature higher than its rating, the damper will open. Also, the damper will open regardless of whether the low temperature thermal disc (165°F or 212°F) has activated or not and regardless of a command from additional sensing devices, such as a smoke detector.

NOTE: If the master control switch (MCS) is in the re-open position and the high temperature thermal disc has not been tripped, the damper will remain open regardless of whether the low temperature thermal disc and/or other sensing devices have tripped or not. If the damper has been exposed to an elevated temperature higher than its temperature degradation rating, or if the electrical or pneumatic supply has been disconnected, the damper will close and remain closed regardless of any (MCS) position.



In the interest of product development, Louvers & Dampers reserves the right to make changes without notice.