

SPACEPAK J SERIES* AIR HANDLER LINE VOLTAGE CONVERSION


All SPACEPAK air handlers are delivered from the factory configured to operate on 230V input power. Beginning with the J Series*, however, these are now field convertible to 115V input. The following instructions provide the procedure to complete this conversion.


Refer to the Wiring Diagram on the back side of the Access Panel, or in the Installation and Operation Manual while performing this conversion. All electrical wiring must be in accordance with the National Electrical Code ANSI/NFPA No. 70-latest edition and any additional state or local code requirements. If an external electrical source is utilized, the fan coil unit, when installed, must be electrically grounded.

- 1. Before beginning the conversion, ensure that the power is supplied by a dedicated circuit of no less than #14 AWG copper conductors, and the circuit is protected by an overcurrent protective device (fuse or circuit breaker) rated at no greater than 20 amps.
- 2. **A WARNING** Ensure that no electrical connections are made to the unit. Failure to do this may result in injury or death. The following steps should be only performed by a licensed and qualified technician. Do not proceed to steps 3-9 unless you are a qualified technician.

- 3. Remove the ORANGE wire from the L2 terminal of the power input block, and cap or cut and insulate it to ensure it does not contact any other circuit or surface.
- 4. Replace the L1 L2 label with the L N label provide with the Conversion Kit.
- 5. Unwrap the WHITE wire from the Transformer and connect it to the same terminal on the INPUT TERMINAL BLOCK, adjacent to the RED wire, and tighten the screw.
- 6. Place the Field Conversion Harness, p/n 460-WG1265-01, supplied with the conversion kit, onto the J10 plug of the Control Board.
- 7. Complete the included conversion label, P/N W49-WG0861-12 and affix it to the outlet panel of the unit.
- 8. Before making any connection, check for continuity from L1 to N on the power input terminal block. You should measure 200-300 ohms. Less than that may indicate a short. Double check your wiring before proceeding.
- 9. Complete the installation by connecting the Line, Neutral, and ground wires to the input power block. Replace the electrical box cover, and resume installation per the IOM.

*This instruction sheet is only applicable to models that have utilized the adavanced controls board. See specific model number and ensure the last digit is "B".

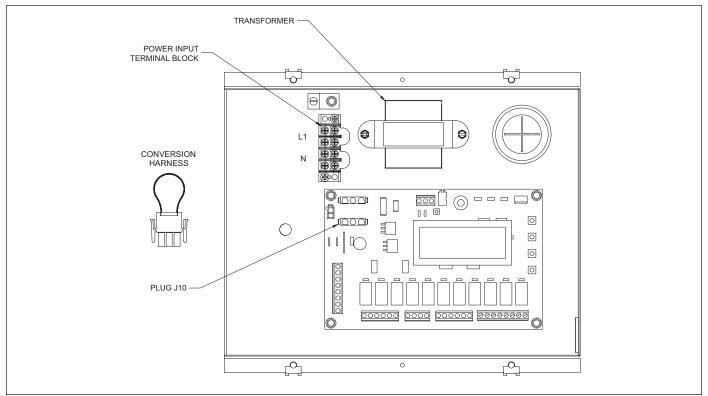

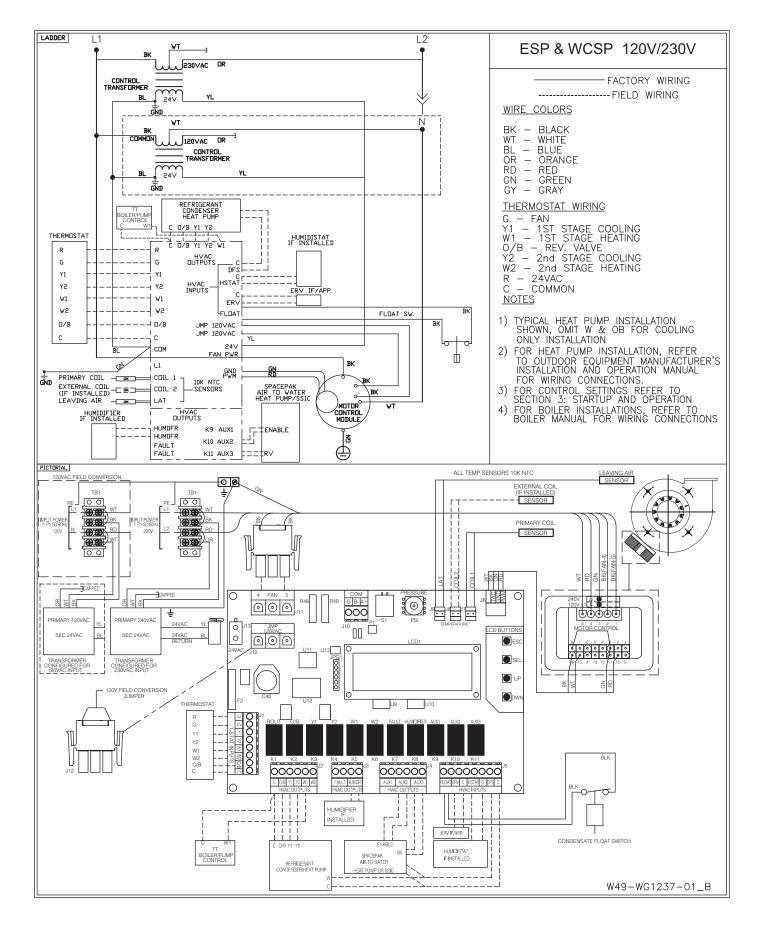

260 NORTH ELM STREET WESTFIELD, MA 01085 (413) 564-5530 • FAX (413) 564-5815



7555 TRANMERE DRIVE MISSISSAUGA, ONTARIO L5S 1L4 CANADA (905) 670-5888 • FAX (905) 670-5782